



# Privacy Gate Installation Instructions

SOLID PRIVACY GATE # 33000



LATTICE PRIVACY GATE #33020



## Box Contents

2 Rails, grooved (1-top rail and 1-bottom rail)  
 4 pcs Tongue-and-groove panels  
 2 U-channels  
 2 New England Caps  
 2 Stainless Steel Hinges  
 1 Socket Extension bit

2 Gate post  
 1 Latch  
 4 Pkgs screws  
 1 Pkg PVC glue

2 Rails, grooved (1-top rail and 1-bottom rail)  
 4 pcs Tongue-and-groove panels  
 1 Middle rail grooved two sides  
 1 Lattice Panel  
 2 Gate Post  
 2 Stainless Steel Hinges  
 1 Socket Extension bit

2 New England Caps  
 4 U-channels  
 1 Latch  
 4 Pkgs screws  
 1 Pkg PVC glue

## CODE INFORMATION



It is the installer's responsibility to follow all local codes, safety requirements, and file all necessary permits with the building inspector's office prior to installing the product. AmeraFence shall not be held liable for improper or unsafe installations.

### Safety:

- Determine property lines.
- Review local building codes.
- Call utility company to mark lines before you start digging.


## GENERAL INFORMATION

- Easy to assemble gate kits are designed for a 48" opening. Gate is 46" wide.
- Place hinges on side of post where you wish the gate to swing open.
- Mount hinges on gate post before reinforcing with rebar and concrete.
- Gate posts are typically the same as an End Post. Reinforce gate post to prevent any long-term gate sagging or post warping from the weight of the gate. Gate post sold separately.
- Check for any obstructions that will keep the gate from swinging freely.

## GATE POST REINFORCEMENT

Duct tape ends of rails before inserting into gate post to prevent concrete from filling rails. Mount all gate hardware before inserting rebar and filling with concrete. Insert 2 lengths of 3/8" x 8' rebar into the hinge side gate post keeping the rebar 1/2" from edge of post. Fill post with concrete.

**Wait 24 to 48 hours before hanging gate.**

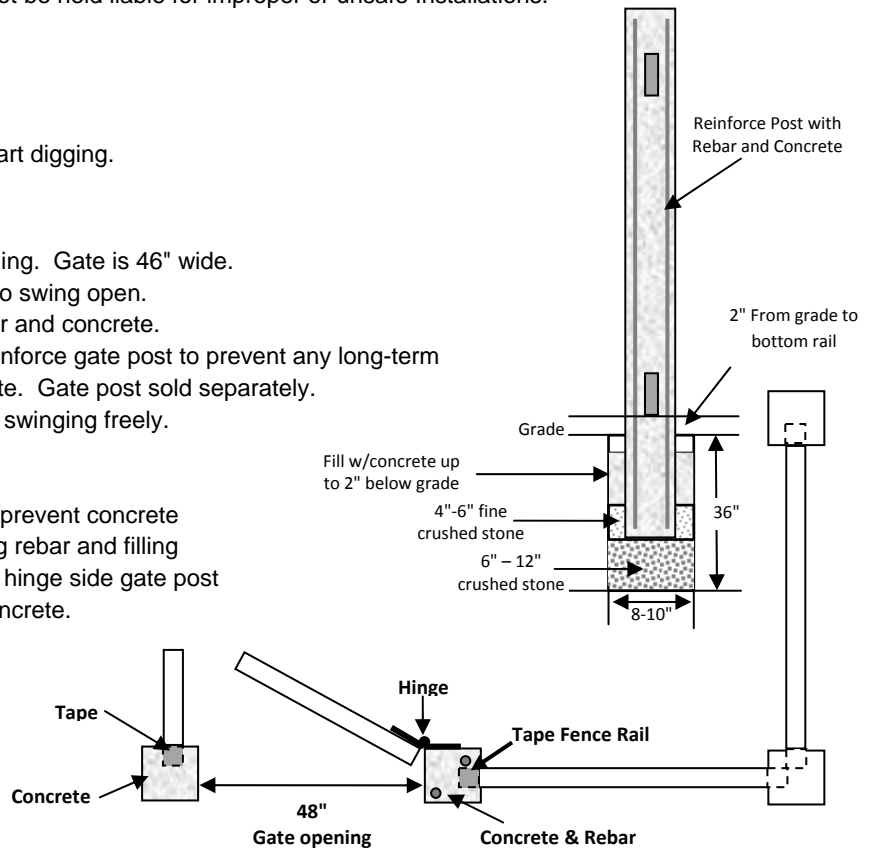

## **ASSEMBLY FOR PRIVACY GATE**



1) Unpack and organize all parts and pieces from box.

2) Insert bottom and top rails into the rail pocket on post. (Note: Rail pockets on Privacy Solid gate posts are the same for either top or bottom. For the "Privacy Lattice Top", locate the middle rail pocket toward the top of the gate.)

3) Secure by running 3 self-tapping hex head screws through each pocket in the rails to lock them together.



4) Place U-channel on the cut edge of the V-groove panel that has been cut down in width. (Lattice Privacy Gate will have 2 sets of u-channels, one for the lattice and one for the V-groove panels).

5) Slide additional v-groove panels into place.




6) Place U-Channel in the edge of final pane.



7) Complete gate assembly by placing 2nd gate post on top and bottom rails. Secure with 3 Hex-head self-tapping screws through each pocket into the rail.

8) Glue U-Channels to the gate post. This allows the panels to expand and contract as needed.

9) Mount hinge hardware with self-tapping hex-head screws in line with the bottom of the top rail and the top of the bottom rail.

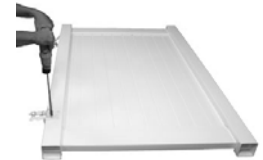

10) Locate hinge latch approximately 1/3 down from the top of the gate and mount using self-tapping hex-head screws. **Note:** There may be code restrictions regarding gates that lead to pool areas. Please check with your local building inspector's office.



We appreciate your business and thank you for selecting **Amerafence**. If you have any questions or suggestions, please feel free to contact us at 877.788.1828 or visit us at [www.amerafence.com](http://www.amerafence.com) .