



Picket Gate Installation Instructions

STRAIGHT PICKET GATE #33040



SCALLOPED PICKET GATE #33060



Box Contents

2 Rails, (1-top rail and 1-bottom rail)	
8 Straight Pickets	8 Picket Caps
2 Gate post	2 Gothic Caps
2 Stainless Steel Hinges	1 Latch
1 Socket Extension bit	4 Pkgs screws
1 Pkg PVC glue	

2 Rails, (1-top rail and 1-bottom rail)	
8 Scalloped Pickets	8 Picket Caps
2 Gate post	2 Gothic Caps
2 Stainless Steel Hinges	1 Latch
1 Socket Extension bit	4 Pkgs screws
1 Pkg PVC glue	



CODE INFORMATION

It is the installer's responsibility to follow all local codes, safety requirements, and file all necessary permits with the building inspector's office prior to installing the product. AmeraFence shall not be held liable for improper or unsafe installations.

Safety:

- Determine property lines.
- Review local building codes.
- Call utility company to mark lines before you start digging.



GENERAL INFORMATION

- Easy to assemble gate kits are designed for a 48" opening. Gate is 46" wide.
- Place hinges on side of post where you wish the gate to swing open.
- Mount hinges on gate post before reinforcing with rebar and concrete.
- Gate posts are typically the same as an End Post. Reinforce gate post to prevent any long-term gate sagging or post warping from the weight of the gate. Gate post sold separately.
- Check for any obstructions that will keep the gate from swinging freely.

GATE POST REINFORCEMENT

Duct tape ends of rails before inserting into gate post to prevent concrete from filling rails. Mount all gate hardware before inserting rebar and filling with concrete. Insert 2 lengths of 3/8" x 8' rebar into the hinge side gate post keeping the rebar 1/2" from edge of post. Fill post with concrete.

Wait 24 to 48 hours before hanging gate.

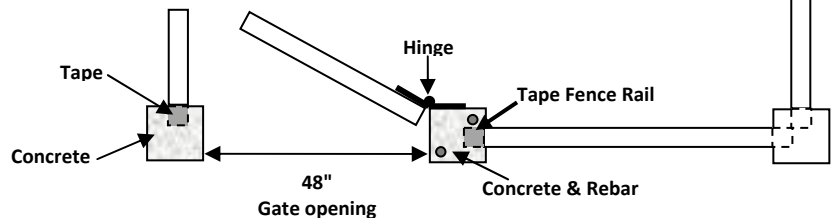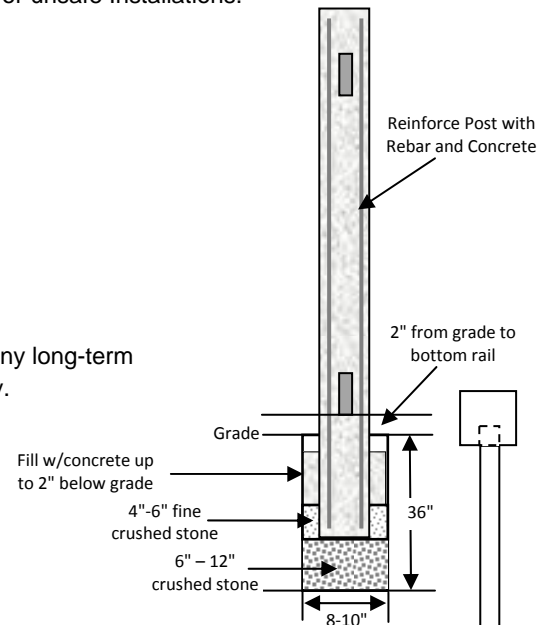


ASSEMBLY FOR PICKET GATES

1) Unpack and organize all parts and pieces from box.



2) Insert pickets into bottom rail (bottom rail has picket openings on one side only) and snap into place, then place top rail over pickets (top rail has openings for pickets on top & bottom of rail), add caps. *Note: top rail will slide up & down.

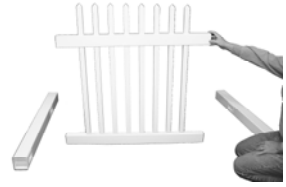

3) Insert bottom rail and top rail into side post.



4) Secure the bottom rail by running 3 self-tapping hex head screws through each rail pocket in the rails to lock them together.



5) Mount hinge hardware with self-tapping hex-head screws in line with the bottom of the top rail and the top of the bottom rail.



6) Locate hinge latch approximately 1/3 down from the top of the gate and mount using self-tapping hex-head screws. **Note:** There may be code restrictions regarding gates that lead to pool areas. Please check with your local building inspector's office.



We appreciate your business and thank you for selecting **Amerafence**. If you have any questions or suggestions, please feel free to contact us at 877-855-1080 or visit us at www.amerafence.com.